

ECLIPSE **TD**

Speaker Stand (D5) Owner's Manual

Thank you for purchasing this high quality speaker stand. Please read this owner's manual before assembling the stand, and be sure to use it properly. An accident or injury can result if the stand is incorrectly assembled or unspecified parts are used. After assembly, keep this manual where it can be consulted when necessary.

Using this product safely and properly

The indicator symbols shown below are used in this manual and on the stand to ensure proper and safe use of the product, prevent injuries and avoid damage to surrounding items. Please become familiar with these symbols and their associated information before proceeding to the assembly instructions of this manual.

Warning

This symbol indicates that death or serious injury may result from improper installation if this information is overlooked.

Caution

This symbol indicates that injury may result or damage to property could occur from improper installation if this information is overlooked.

Warning

Do not place this stand on a tall object or high shelf. If the stand were to fall, it could cause an injury.

Caution

This stand is meant for use with the 307 speaker. Do not use the stand for other purposes. Improper use of the stand can result in an unstable condition with the potential to cause an injury by falling.

Assemble the stand on a level surface. Placing the stand on an uneven surface can lead to overturning and result in an injury.

Do not place the stand where people regularly move past it. Bumping into the stand can cause an injury.

Place the stand on a solid and level floor. Installing the stand in a location that is unstable can cause it to fall and result in an injury.

Do not drop or drag the stand when assembling or transporting it. Pushing over or dragging the stand can result in an injury or cause damage to the floor.

Do not climb onto or hang from the stand. Be especially careful about children trying to do this. If the stand falls over it can cause an injury.

The stand is heavy, so be sure 2 or more people cooperate in unpacking or moving it. Improper lifting can cause a back injury and dropping the stand can injure feet.


[1] Cautions Before Use

- (1) This is a stand for a speaker system. Avoid using the stand for other purposes.
- (2) The stand is very heavy. Use caution when handling it.
- (3) Place the stand on a solid and level floor. Do not place the stand in an unstable location.
- (4) Be careful not to tip over the stand.
- (5) Be careful that the speaker system does not fall from the stand.
- (6) If the stand becomes dirty, clean it by lightly wiping with a soft cloth having a neutral cleaning solution on it.
Do not use a substance like thinner or benzene.


[2] Required Tools

Philips Screwdriver


[3] Included Parts

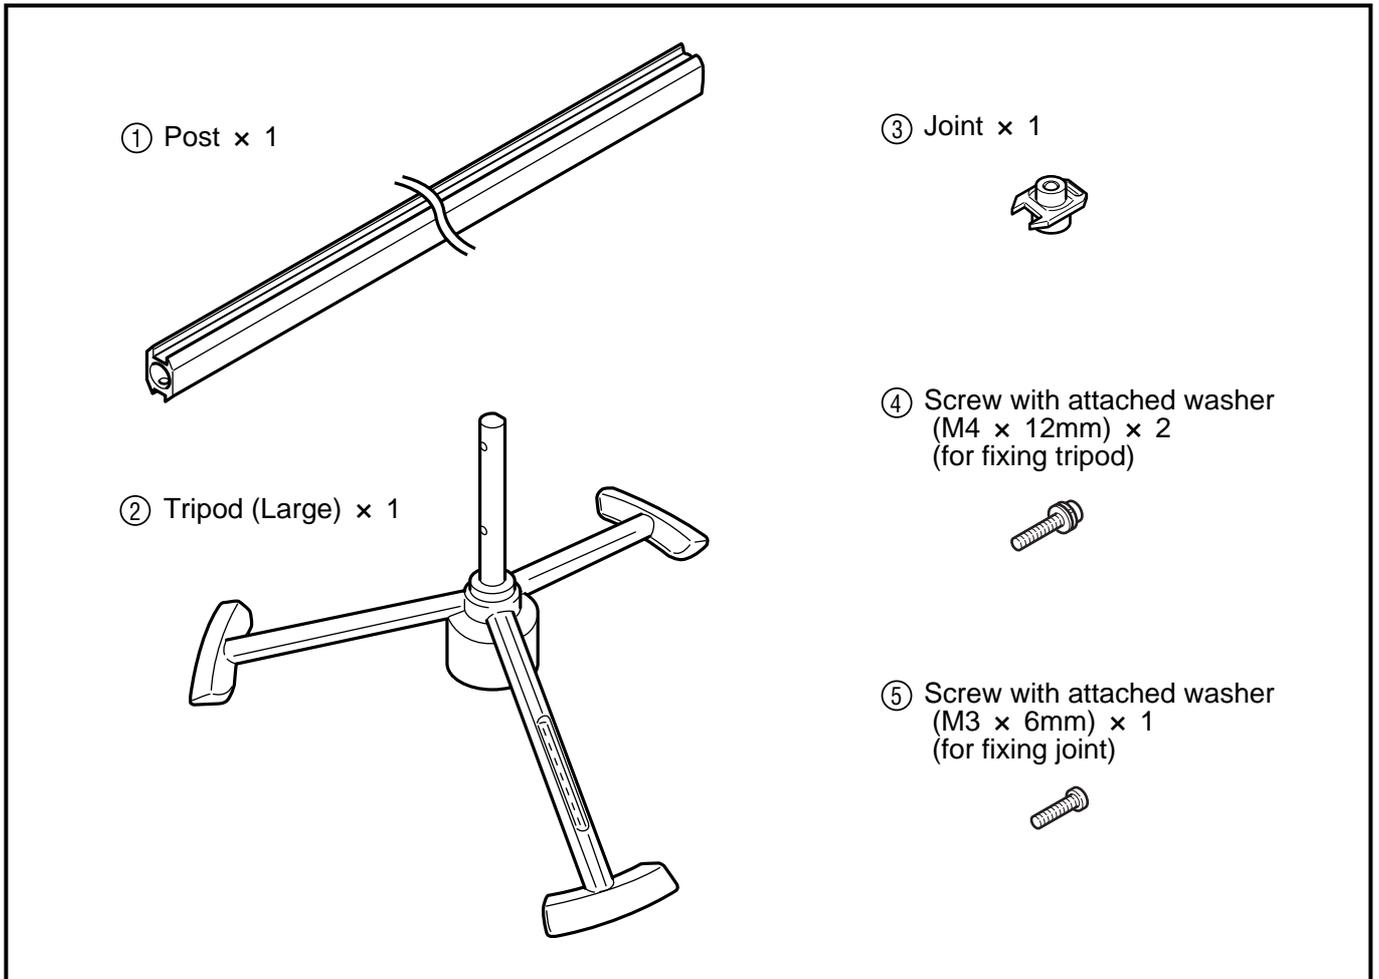


[4] Assembly

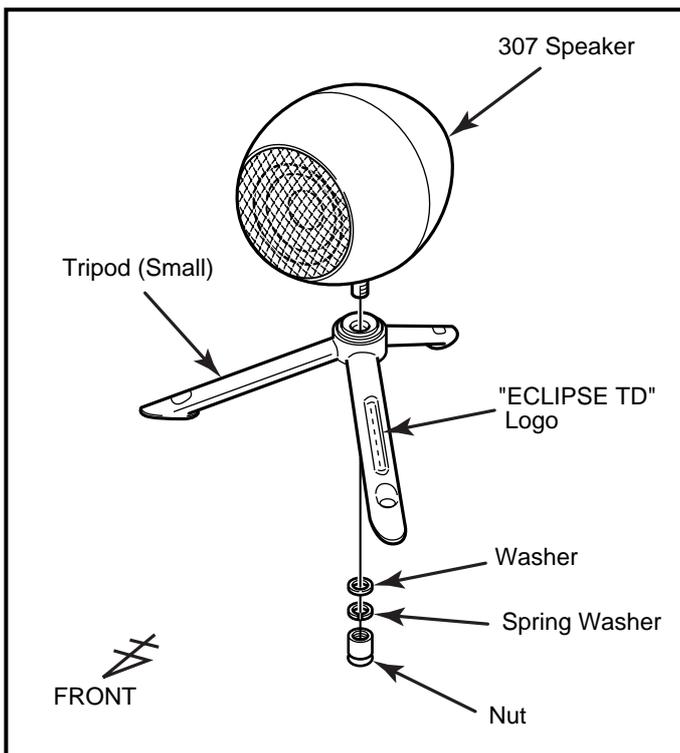

- (1) Remove tripod (small) from 307 speaker
- 1 . Remove the nut, spring washer and washer, and then separate the 307 speaker from the tripod (small).

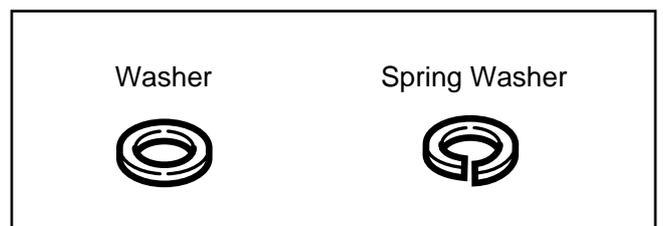

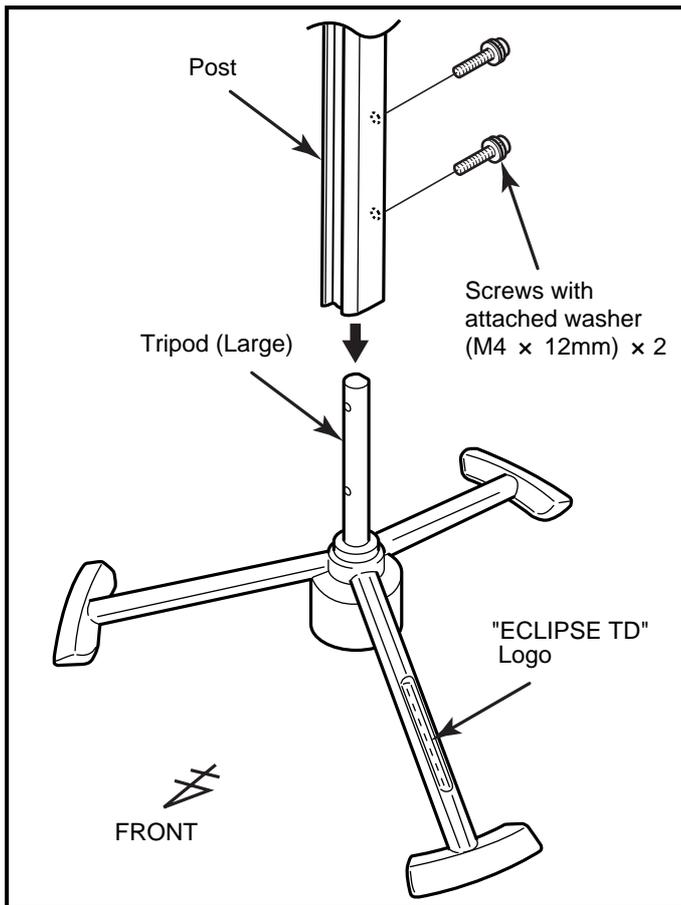


(2) Assemble post and tripod (large)

- 1 .Slip the post onto the tripod (large) and fasten with screws having attached washers (M4 x 10mm).

⚠Caution

Assemble stand so that the "ECLIPSE TD" logo in on the right side when seen from the front.

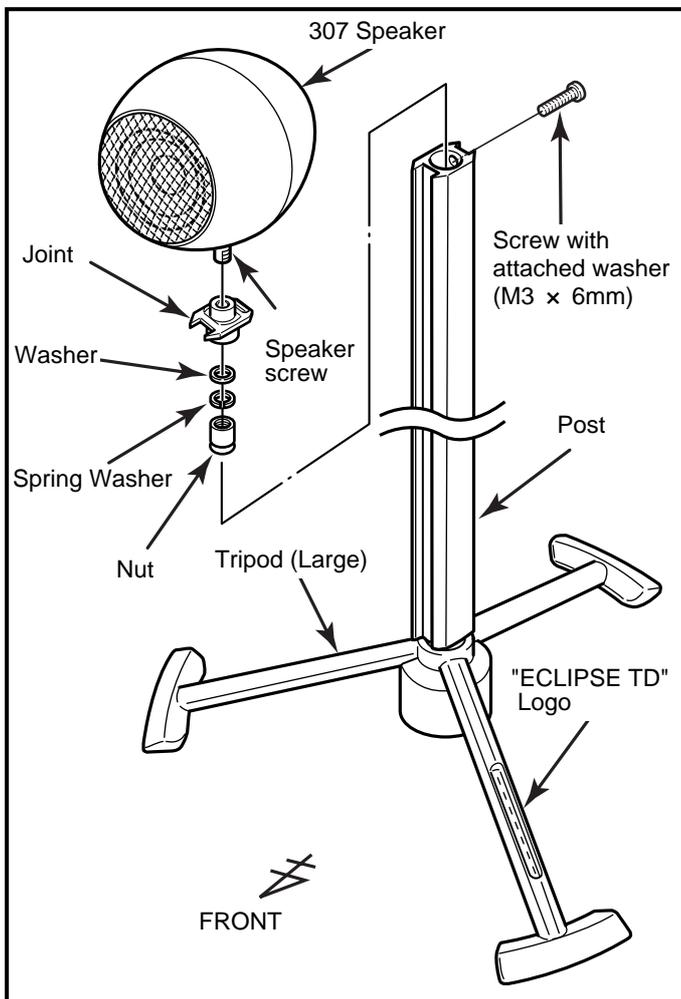


(3) Install 307 speaker onto post

- 1 .Slip the joint onto the 307 speaker and fasten with washer, spring washer and nut.
- 2 .Insert the joint now attached to the 307 speaker into the post, and then fasten with the screw having an attached washer (M3 x 6mm).

⚠Caution

- The speaker is heavy, so use both hands when lifting to slip it onto the post.
- Be careful not to mix up the tripod fixing screws with washers (M4 x 12 mm) and the joint fixing screws with washers (M3 x 6 mm) during assembly.
- If you tighten the nuts (marked with) while the speaker screws (marked with) are at an angle, the speaker will remain loose and will not be secure. If this happens, loosen the nuts (marked with), check that the speaker screws (marked with) are straight, and then carefully retighten the nuts (marked with).

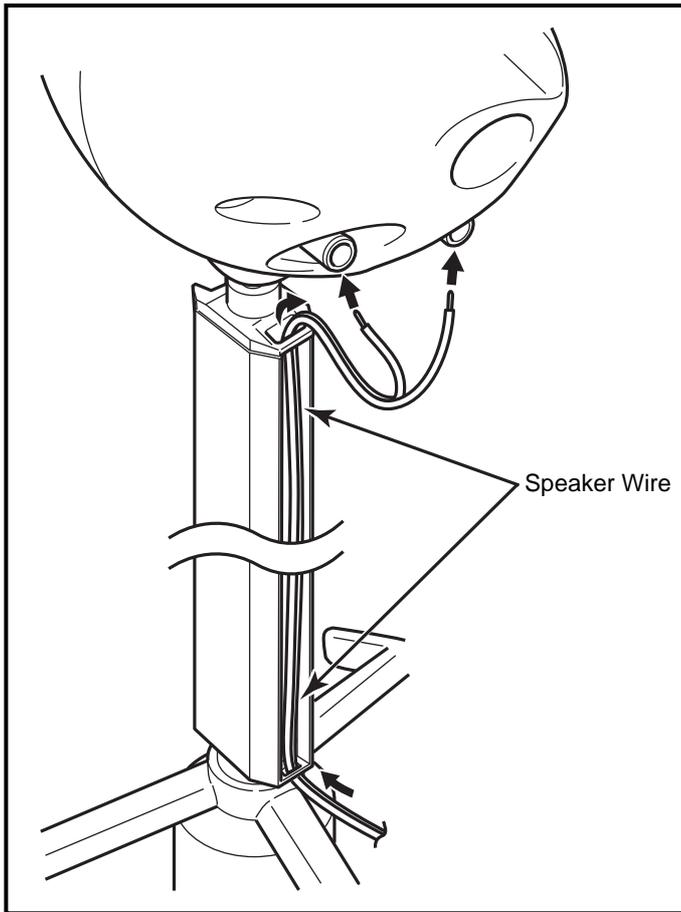

(4) Routing speaker wire

- 1 .Route the speaker wire through the wiring holes in the joint and post, and then connect the wire ends to the speaker.

[5] Specifications

Dimensions and Weight

External Dimensions (W × D × H mm)	Weight (kg/1 stand)
315 × 275 × 990	Approximately 2.5

* Specifications and external appearance may change without notice.

FUJITSU TEN LIMITED

KOBE, JAPAN

090003-2694A700
0307DE(NO,CN)